

Starting and Operation Instructions

- With parking brake applied and transmission in ~~Park~~ (P), turn ignition key to RUN position.
- Wait for RUN light to appear and remain lit.
- Apply foot brake and release parking brake.
- Place transmission in gear, Reverse (R) or Low(1).
- Apply pressure to accelerator pedal.

DO NOT use the clutch for changing gears while the vehicle is stopped, or to start the vehicle! The clutch should be fully released before accelerating. Use the clutch only for shifting between 1st and 2nd gear. DO NOT exceed 35 mph in first gear, or 70 mph in second gear.

WARNING!

- This vehicle will roll while stopped. Always shift into the Park position when turning off the ignition, then apply the parking brake.
- Injury or damage could occur if you drive this vehicle through standing water more than 4 inches deep. Avoid areas of standing water!
- Avoid stopping on steep inclines (over 15% grade). This vehicle may not be able to move up a steep incline from a dead stop. The motor may cut out after 3 seconds of full throttle and no movement. If this occurs, the vehicle will roll downhill. Be prepared to apply the brake pedal immediately!

IMPORTANT: READ YOUR OWNERS MANUAL BEFORE DRIVING THIS VEHICLE!